


# #120106 Service Kit & #120100 Lock Kit Assembly Instructions

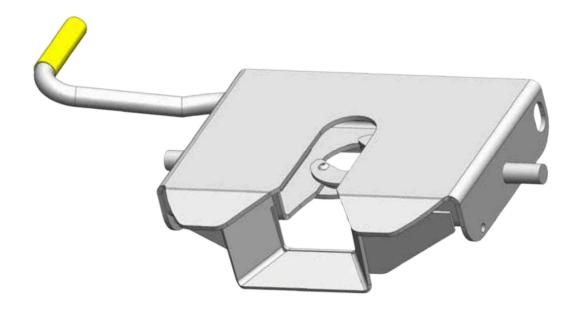

## **Installation Instructions**

The following instructions will provide you with information needed to help you gain a better understanding of your hitch, and also serve as a guide should you ever need to replace any part of your #3601 or #1901 SuperGlide plates.

The following steps should be followed for disassembling the plate hardware on your Fifth Wheel Plate. For more information or installation assistance, please call PullRite at (800) 443-2307.


# **TABLE OF CONTENTS**

Installing Your Service Kit	3
Replacing Your Lock Kit	4-5
Illustration Plate Exploded View & Part Identification	6
Parts List	7

#### **INSTALLING YOUR SERVICE KIT (#120106)**

This section provides you with step-by-step instructions on how to replace a #120106 Service Kit that was sent to you for replacement. Check the Service Kit parts and quantities that were sent to you and report any shortages by calling PullRite at (800) 443-2307.

- 1. To disassemble your Lock Kit, you must relieve the tension on the Lock Bar Spring {G}. Remove the Pin Clip {H} and Push Nut {C} that keeps the handle and spring on the Lock Bar Assembly {M}.
- 2. Begin by removing both Springs {A} & {B}.
- 3. Break the Push Nut {C} from the top of the assembly and simply work your way down through each spring and lever, noting the order of assembly and position. For assistance, see Figure 2 below and reference the "Exploded View and Parts Identification" section.
- 4. Install the new Service Kit in the same manner, starting with Figure 2 and work in reverse, using the new parts you received.

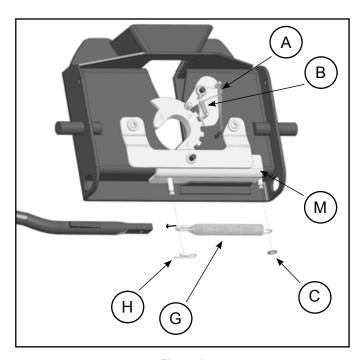



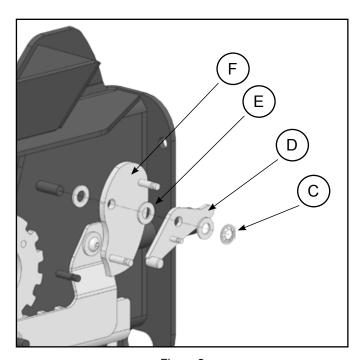


Figure 2

#### **REPLACING YOUR LOCK KIT (#120100)**

This section provides you with step-by-step instructions on how to replace a #120100 Lock Kit, which requires a disassembly of the hitch plate. If you have questions on any of the following steps, please call PullRite at (800) 443-2307 for Customer Service support.

- 1. Check the lock kit parts that were sent to you. To report any shortages, please call PullRite at (800) 443-2307.
- 2. To disassemble your lock kit, you must relieve the tension on the Lock Bar Spring {G}. Remove the Pin Clip {H} and Push Nut {C} that keeps the handle and spring on the Lock Bar Assembly {M}.
- 3. Once you have removed the fasteners from the posts, tightly grip the Lock Bar Spring to prevent it from snapping off the posts due to tension in the spring.
- 4. Move the Release Handle {I} and Lock Bar Spring off the Lock Bar Retainer {K} post, releasing the spring from your hand only when the tension is out of the spring to avoid injury.
- 5. Remove the release handle and lock bar spring completely, and set aside (Figure 1).

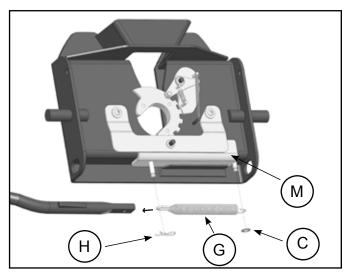


Figure 1

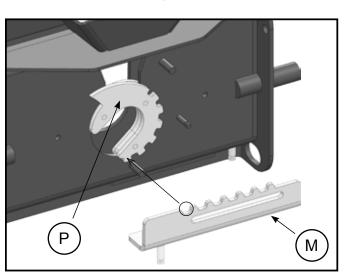


Figure 3

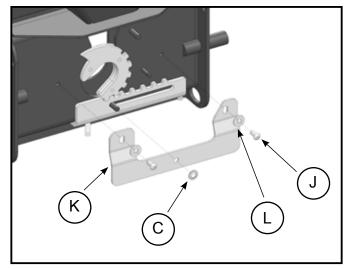


Figure 2

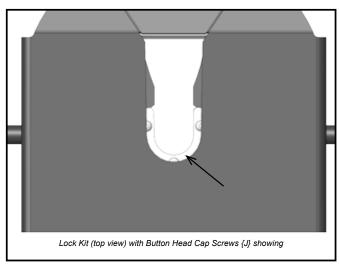


Figure 4

#### REPLACING YOUR LOCK KIT (cont.)

- 6. Next, remove the Push Nut, Button Head Screws {J}, and Flat Washers {L} from the Lock Bar Retainer, and remove completely (see Figure 2).
- 7. The Lock Bar Assembly is now freed from the retainer and can be removed simply (Figure 3).

NOTE: Note the position of the jaw and the Lock Bar Assembly assembly. When re-assembling the head, be sure the first "tooth" of the Lock Ratchet {P} mates with the first notch of the Lock Bar Assembly (Figure 3).

- 8. The Lock Kit is now free to move in the jaw. Move the lock kit to the center position as seen in Figure 4.
- 9. Using an allen wrench (not provided), loosen the Button Head Cap Screw {J} that is located in the center section (Figure 5).
- 10. Next, loosen the Button Head Cap Screw that is indicated in Figure 6.
- 11. Spread the Lock Assembly open, as shown in Figure 7.
- 12. Push the Lock Assembly into the head and slide out the assembly as seen in Figure 8.
- 13. Install the new Lock Kit in the same manner, starting with Figure 8 and work in reverse, using the new parts you received.

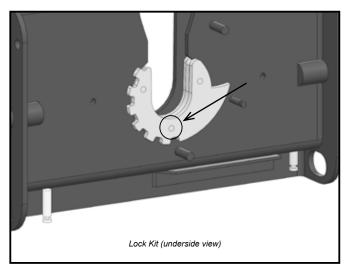


Figure 5

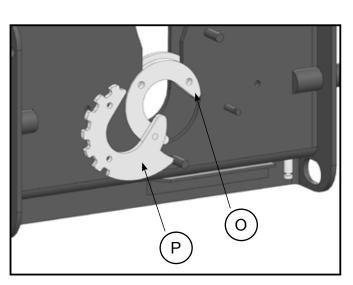


Figure 7

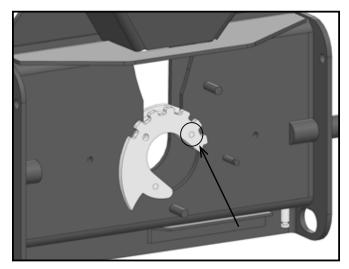


Figure 6


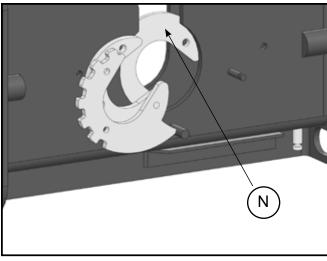


Figure 8

### PLATE EXPLODED VIEW & PART IDENTIFICATION

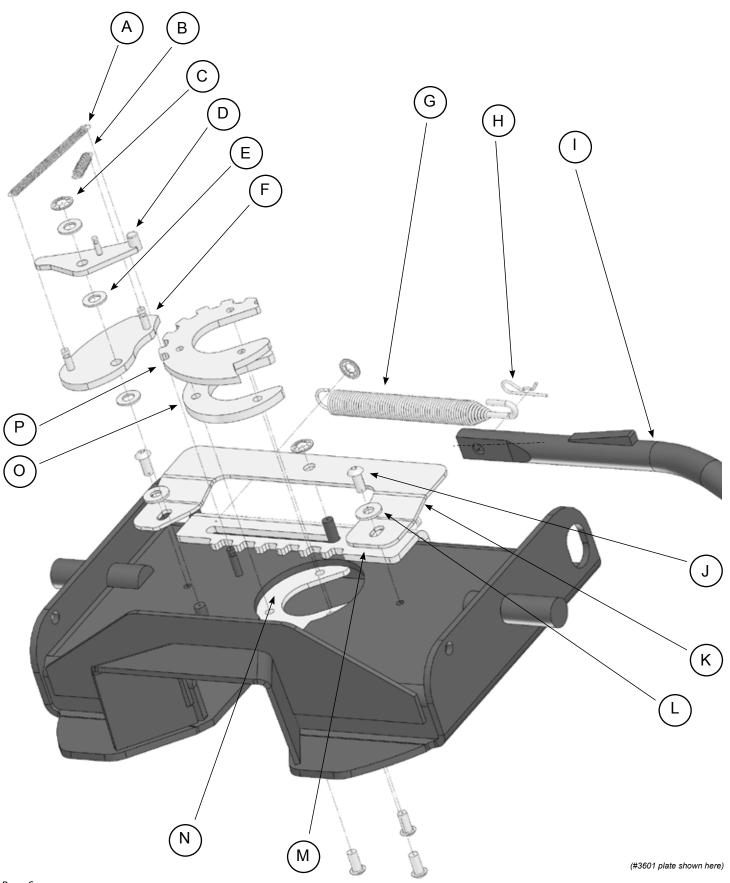

## PARTS LIST

COMPLETE PLATE ASSEMBLY						
Item	Description	Part No.	Qty.	Material		
Α	LOCK CATCH SPRING	12010011	1			
В	LOCK LEVER SPRING	12010012	1			
С	PUSH NUT	98410527	3	3/8" PUSH NUT		
D	LOCK LEVER ASSEMBLY	120102	1			
E	3/8" FLAT WASHER	98250205	3	3/8" SAE FLAT WASHER ZINC PLATED		
F	LOCK CATCH ASSEMBLY	120101	1			
G	LOCK BAR SPRING	35010006	1			
Н	PIN CLIP	98410127	1	#3 13 GAUGE 1.63" OAL ZINC PLATED		
I	RELEASE HANDLE	350104	1			
J	BUTTON HEAD SCREW	98010243	5	5/16" - 18 x 3/4" ZINC PLATED		
К	LOCK BAR RETAINER	12010004	1			
L	5/16" FLAT WASHER	98250160	2	5/16" USS FLAT WASHER ZINC PLATED		
М	LOCK BAR ASSEMBLY	350105	1			
N	TOP LOCK WASHER	12010001	1			
0	LOCK CENTER	12010003	1			
Р	LOCK RATCHET	12010002	1			

#120106 — UCP SERVICE KIT CONTENTS					
Item	Description	Part No.	Qty.	Material	
Α	LOCK CATCH SPRING	12010011	1		
В	LOCK LEVER SPRING	12010012	1		
С	PUSH NUT	98410527	1	3/8" PUSH NUT	
D	LOCK LEVER ASSEMBLY	120102	1		
Е	3/8" FLAT WASHER	98250205	3	3/8" SAE FLAT WASHER ZINC PLATED	



MANUFACTURED BY:
PULLIAM ENTERPRISES, INC.
13790 East Jefferson Blvd.
Mishawaka, IN 46545
(574) 259-1520 • (800) 443-2307
info@pullrite.com • www.pullrite.com