



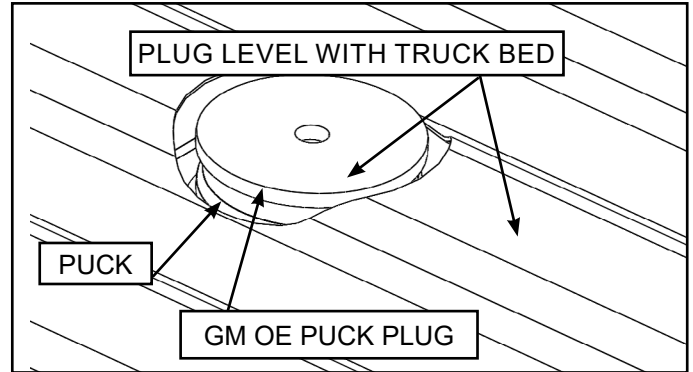


GM OE PUCK PLUG KIT #2620

This kit is for GM trucks featuring the OE prep package for towing. The PullRite GM OE Puck Plugs fill the gap between truck bed and the tops of the pucks, adding bed support for the SuperLite 2600 Bed Saver Rails.

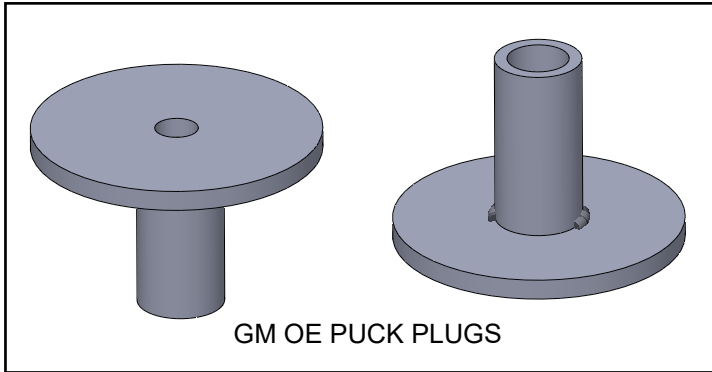

KIT INSTRUCTIONS:

- First, remove the (4) OE Puck Covers.
 - Holding the top of the plug, place the bottom of the Plug into the GM Puck. The Plug will fit loosely. Center within hole.
 - Repeat with the other three plugs. Make sure all (4) plugs are set into each puck location.
- The Pullrite 2600 hitch is ready to Install.

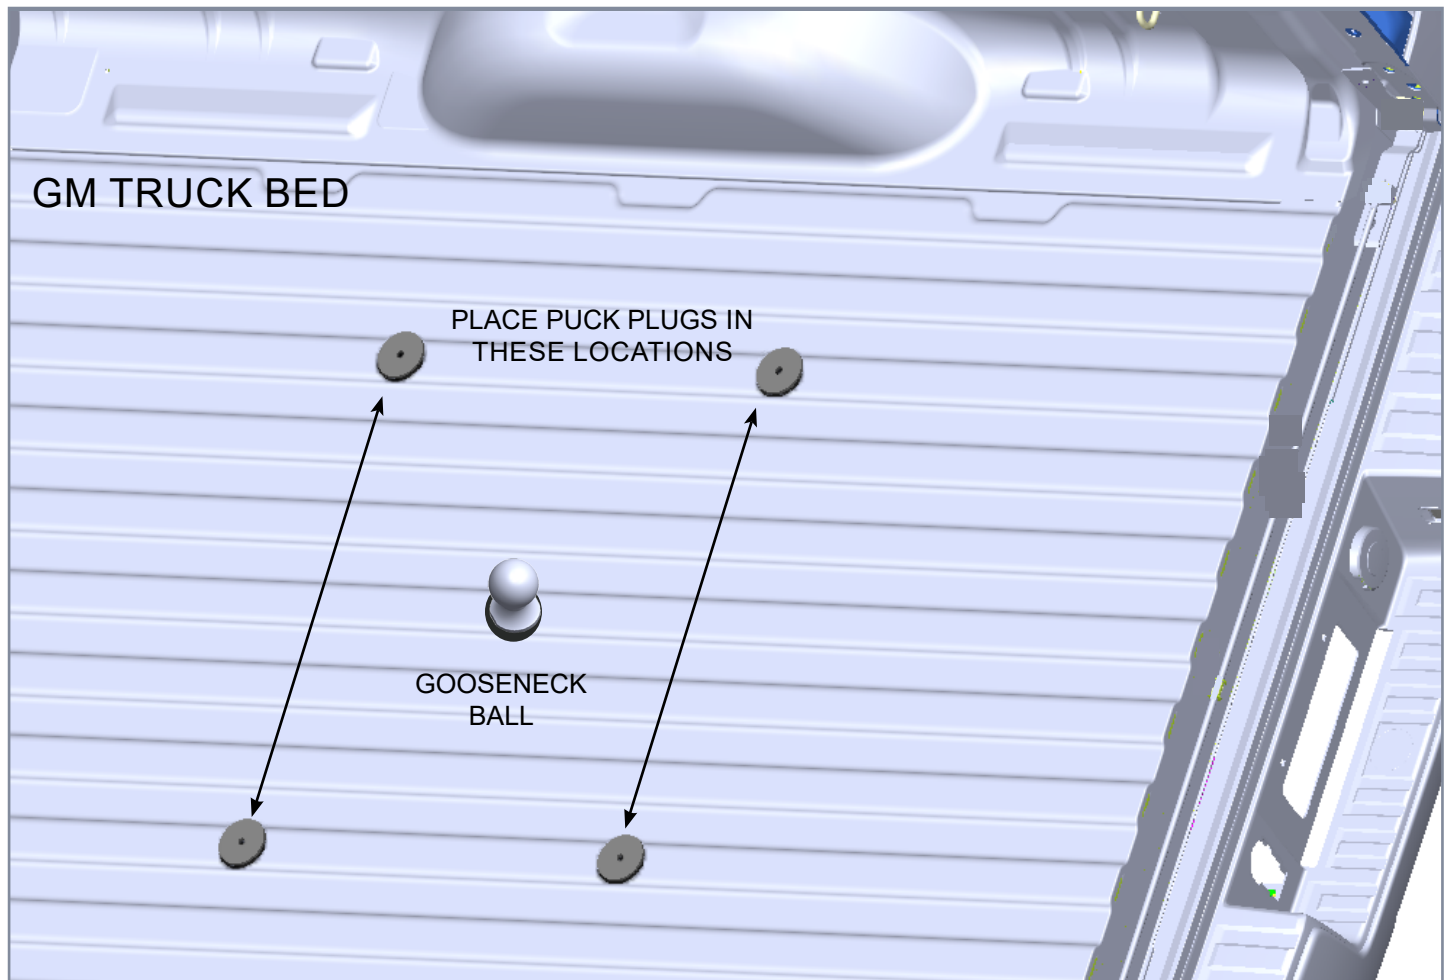

Questions? Contact PullRite Customer Service - 800 443 2307 or Info@pullrite.com
www.pullrite.com